

RM, 728019 Removing and installing headrest

Technical values

Location	Description	Type	Basic value	Lower tolerance	Upper tolerance
Screws on guide part	Item 1	Tightening torque	3.85 Nm (2.8 ftlb.)		



Retainer plate for guide part

Installation position



Installation position


Preliminary work

1 Remove backrest cover.

722619 Removing and installing cover for backrest - section on "Removing"

Removing headrest

1 Remove headrest -1-.

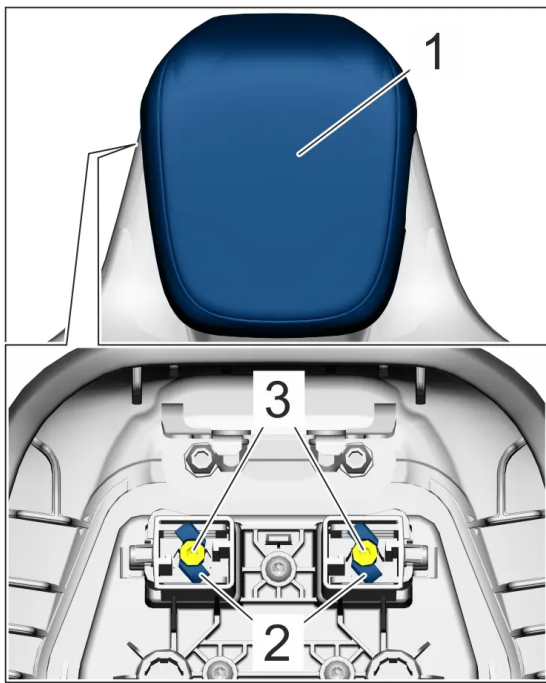

Headrest

- 1.1 Unscrew screws -3-.
- 1.2 Pull -2- out locking pins -1- on the headrest.
- 1.3 Remove headrest -1-.

Installing headrest

Installation is performed in reverse order. Pay particular attention to the following:

- 1 Tighten screws with  Tightening torque 3.85 Nm (2.8 ftlb.)

Subsequent work

- 1 Install backrest cover.

722619 Removing and installing cover for backrest - section on "Installing"