
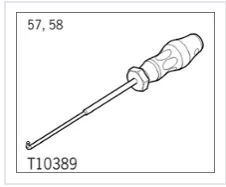


RM, 722619 Removing and installing backrest cover


Tools ▼


◆ Tool denomination	◆ Type	◆ Tool number	
Assembly tool	VW tool	> T10389	

Image




Technical values ▼

◆ Location	◆ Description	◆ Type	◆ Basic value	◆ Lower tolerance	◆ Upper tolerance	
Screw securing backrest cover to seat	Item 1	Tightening torque	5 (3.5 ft.lb.) Nm			

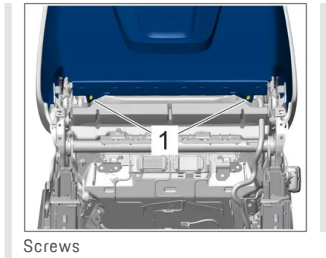

Screws


Screws for backrest cover	Item 2	Tightening torque	4 (3 ft.lb.) Nm			
---------------------------	--------	-------------------	-----------------	--	--	---



Screws for backrest cover

Installation position

Installation position

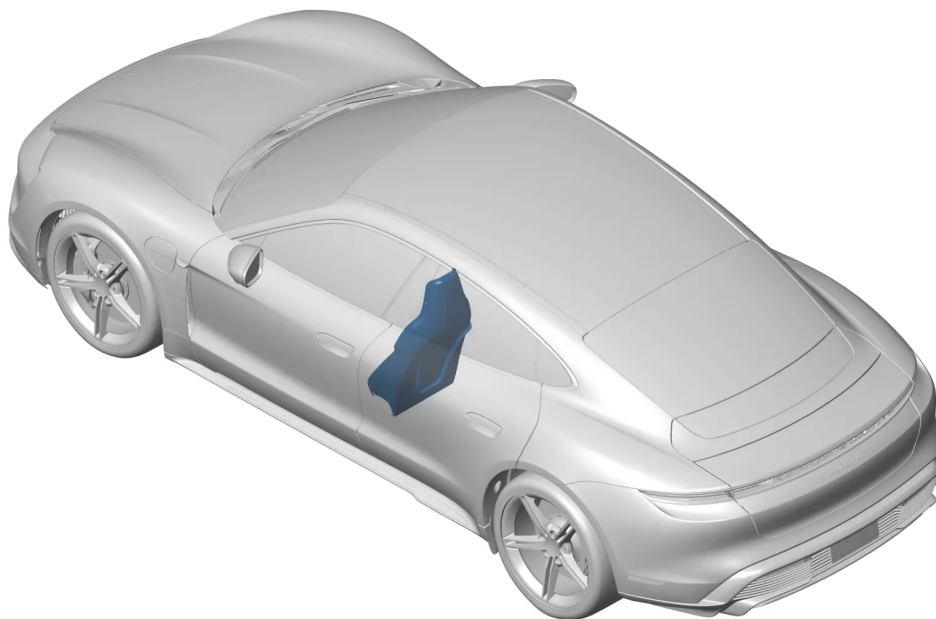

Installation position


Preliminary work

- 1 Remove front seat trim panel.

721619 Removing and installing front seat trim panel


Removing backrest cover

- 1 Detach covering on backrest cover at the underside of the front seat -Arrows- .

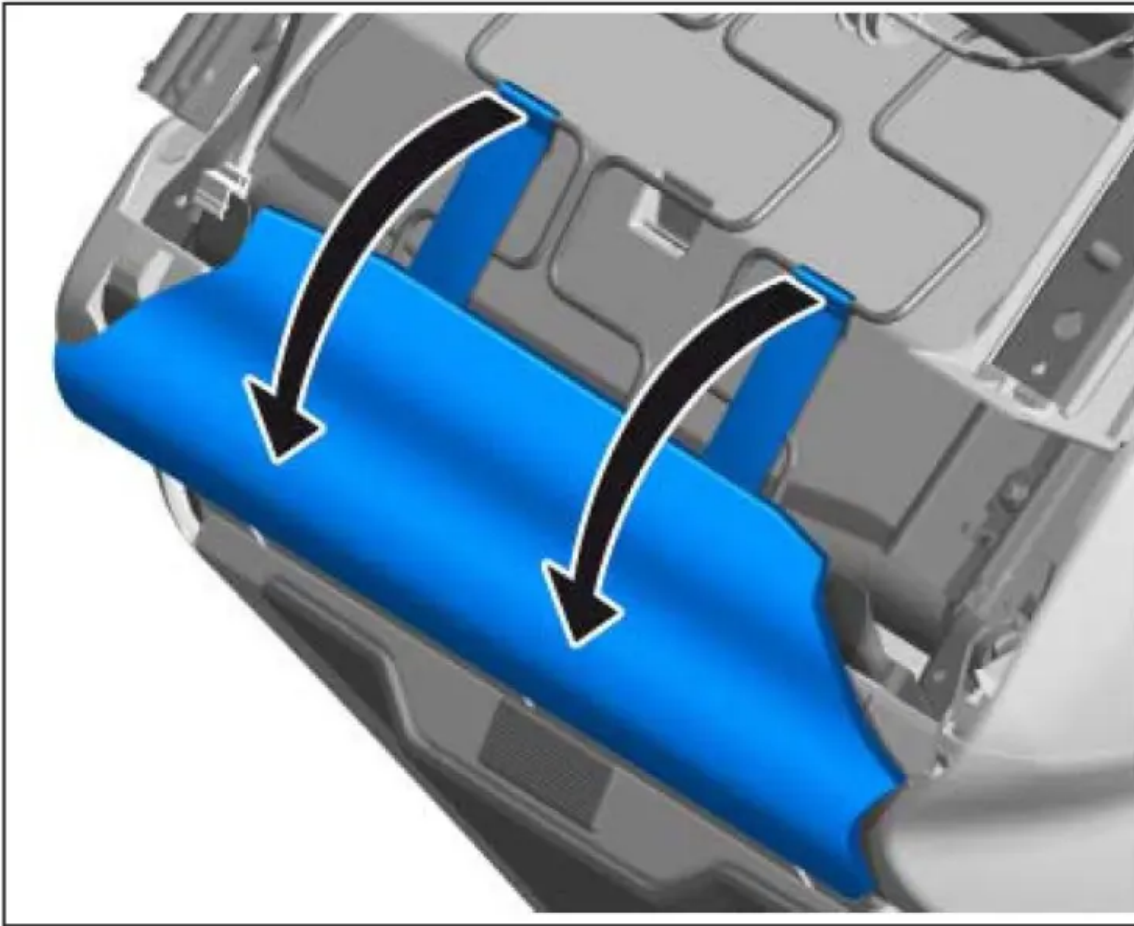


Restraining straps

2 Unscrew screws -1- .

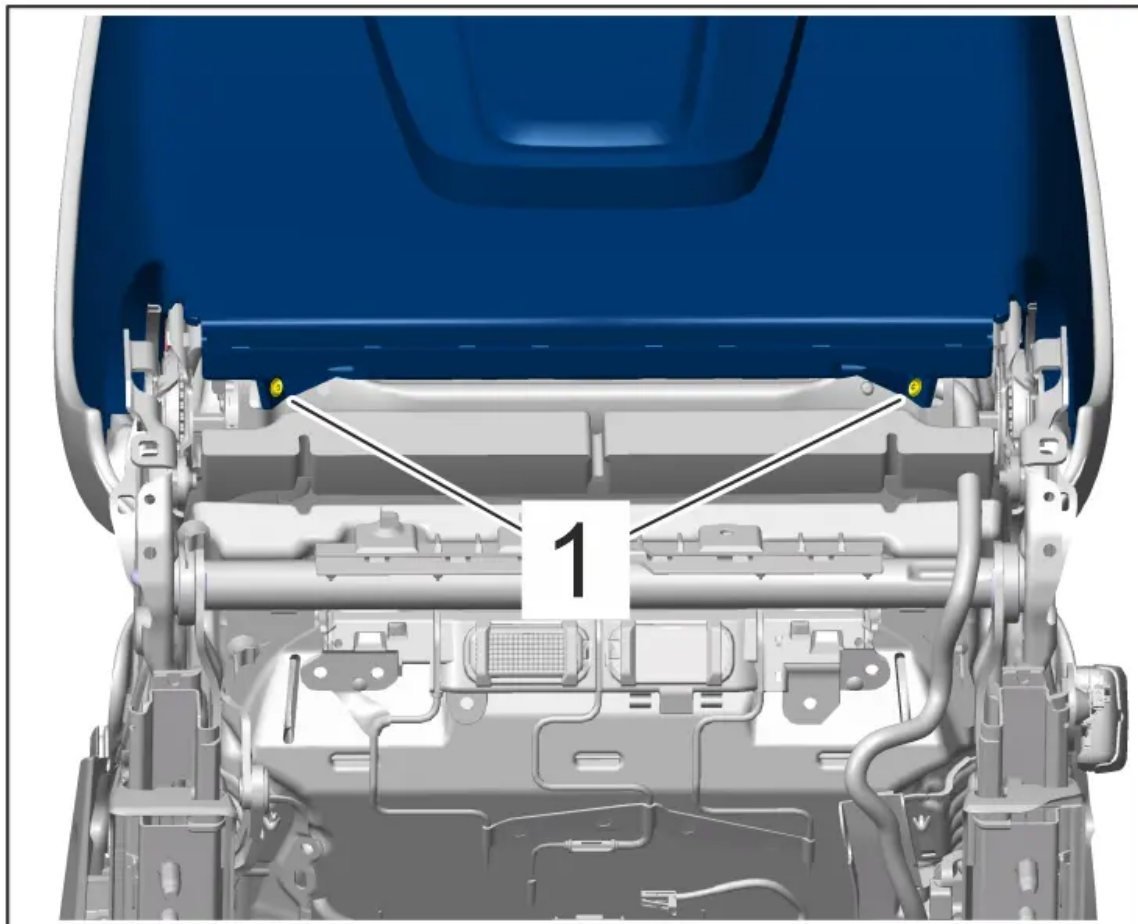

Screws

- 3** Detach seat backrest cover all the way around using a suitable tool and remove backrest cover.

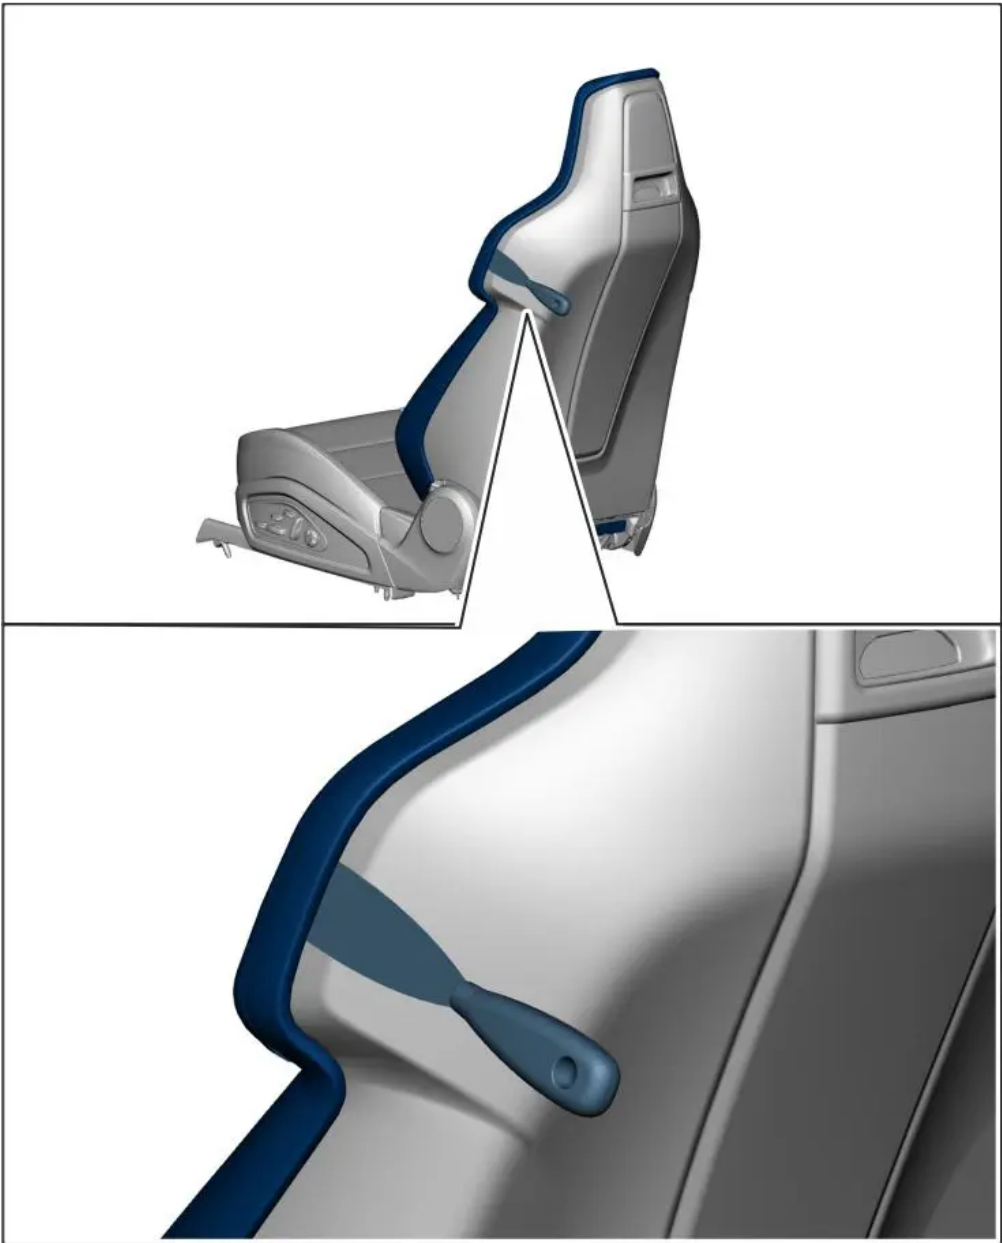


Backrest cover



Position of locking hook


- 4 Pull seat cushion -1- forward slightly and unscrew screws -2- .

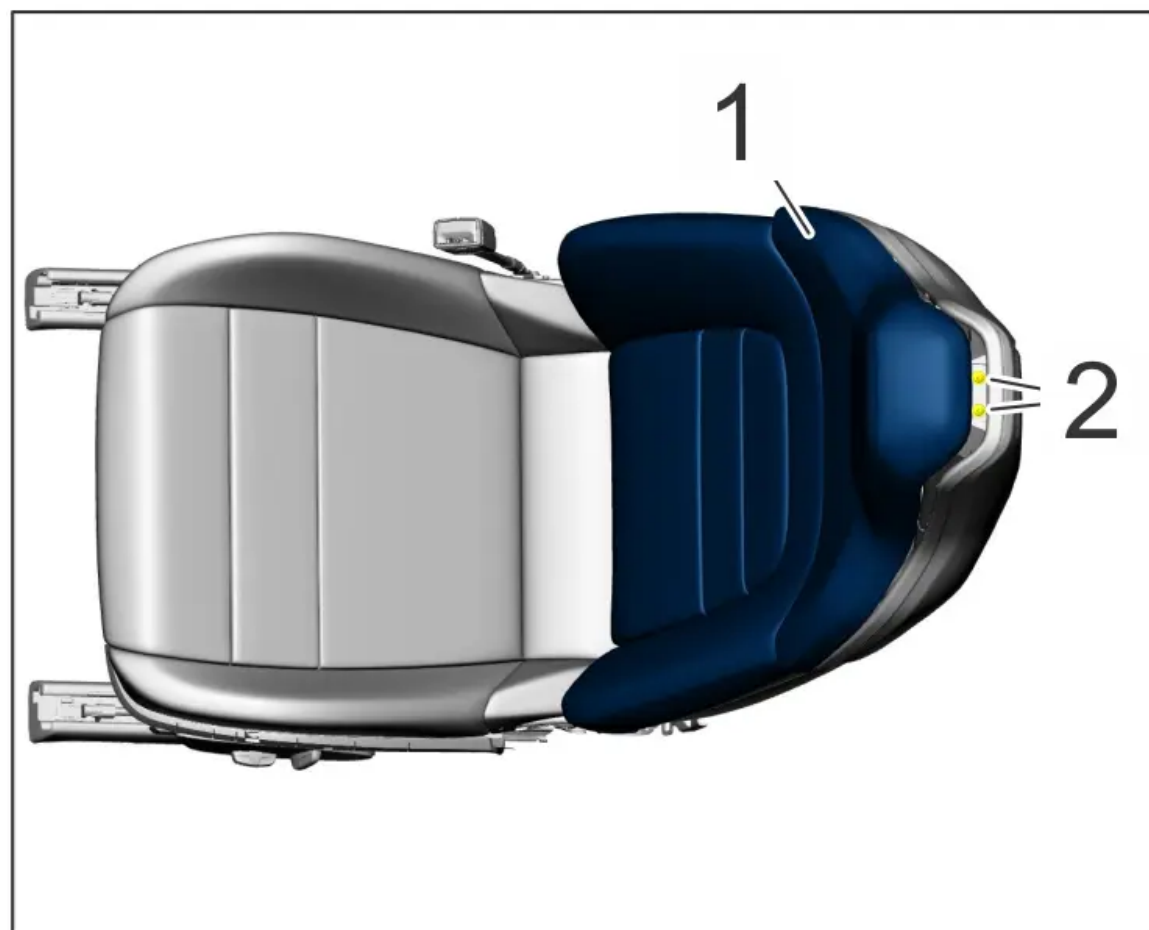

Screws for backrest cover

Only sports seat

- 5 Pull seat cushion -1- forward slightly and release locking hook -2- ➤ T10389 - Assembly tool .

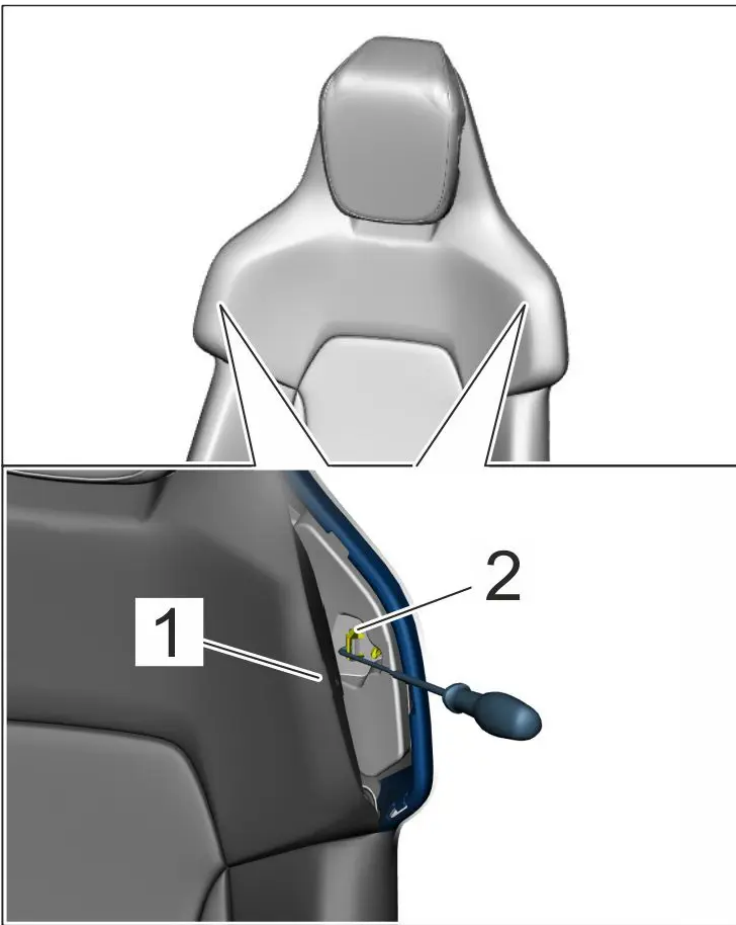

Retaining latch

6 Remove backrest cover.

Installing backrest cover